

RICAMBI - SPARE PARTS

AR026	1 X	PROTEZIONE IN TEFLON SALVACARENA TEFLON PROTECTOR - FAIRING
AR030	1 X	SUPPORTO IN ALLUMINIO SALVACARENA FRENO ALUMINIUM FAIRING SUPPORT FOR BRAKE SIDE
AR031	1 X	SUPPORTO IN ALLUMINIO SALVACARENA CAMBIO ALUMINIUM FAIRING SUPPORT FOR GEAR SHIFT SIDE
AR033	1 X	VITE LATO CAMBIO SCREW FOR FAIRING GUARD - GEAR SHIFT SIDE
AR034	1 X	VITE LATO FRENO SCREW FOR FAIRING GUARD - BRAKE SIDE
AR048	1 X	DEFENDER COLOR RICAMBIO (TEFLON + ANELLA) COLOURED DEFENDER SPARE (TEFLON + CUFF)




Via Lavino 209/C - 40050 Monte San Pietro (BO) - Italy
Tel. +39.051.67.62.200 - Fax +39.051.67.62.202
www-for-racing.com
info@for-racing.com



ISTRUZIONI DI MONTAGGIO
FITTING INSTRUCTIONS FOR
TP011/TPC011
HONDA HORNET 600
1998-2006



WWW.FOR-RACING.COM

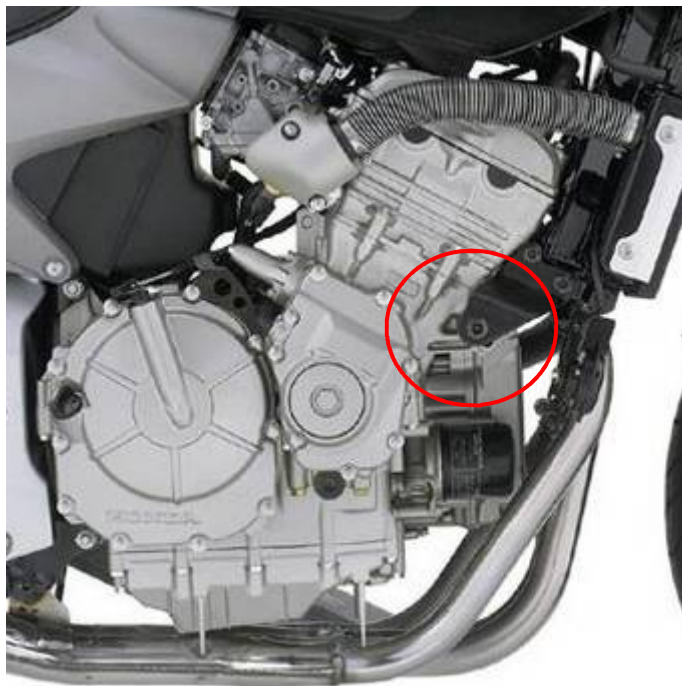

DEFENDER COLOR/
FRAME SLIDER



TAMPONE NORMALE/
FAIRING GUARD
PROTECTOR

Smontare la vite originale e montare il Tampone 4Racing con l'apposita vite data in dotazione.

Smontare le viti originali una per volta, montando prima un tampone, poi l'altro per lavorare in sicurezza.

Remove the original screws which are fitted on the bike and then attach the 4Racing slider using the screws which are supplied in the kit.

For safety reasons we advise the fitting of each slider one at a time.

I Tamponi 4Racing si possono avere in 2 varianti.
Tampone normale in colorazione nera (TP)
Tampone Defender Color con anella colorata, in 7 differenti colori (TPC).

The 4Racing fairing guard protectors are available in 2 types:
Fairing Guard Protector (TP) - only available in black
Frame Slider (TPC) with coloured ring (available in 7 different colours).

 **ATTENZIONE**

Tutti i prodotti For Racing sono realizzati per uso esclusivamente agonistico ed in circuito chiuso, vietato l'uso su strade pubbliche.

 **ATTENTION**

All 4Racing parts are intended for exclusive use on closed circuit race tracks. The use on public highways and roads may be forbidden.